


Remote Control Operation Manual - Air Fuel Ratio Gauge

This document will assist you in operating your remote control.
If you have any questions, please email support@podi.ca.






Tips for remote control operation:

1. Please have the remote control pointing to the gauge you are going to set up.
2. The gauge dial will flash when you press a button to acknowledge the command to enter a mode.
3. To save settings, press  or wait 5 seconds and the gauge will leave the setting mode and save automatically.

Color Setting:

1. Select Air Fuel Ratio Gauge by pressing  on the remote control.
2. Then press  to enter the color selection mode. Press the  button again to cycle through the different color combinations (if applicable). Press  or wait 5 seconds to leave this setting mode.





Brightness Adjust Setting:

1. Select Air Fuel Ratio Gauge by pressing  on the remote control.
2. Then press  to enter the color selection mode. Press  to increase the brightness or press  to decrease. Press  or wait 5 seconds to leave this setting mode.

Warning Value Setting:

Default setting = When same value is held for over 5 seconds, the WARNING (LED backlight will flash) will be activated.

Peak Value Recall:

1. Select Air Fuel Ratio Gauge by pressing  on the remote control.
2. Press  to display peak value recorded, or press  to clear the peak value recorded. Press  or wait 5 seconds to leave this setting mode.