

Remote Control Operation Manual - Boost Gauge

This document will assist you in operating your remote control.
If you have any questions, please email support@pod.ca.

Tips for remote control operation:

1. Please have the remote control pointing to the gauge you are going to set up.
2. The gauge dial will flash when you press a button to acknowledge the command to enter a mode.
3. To save settings, press **SET** or wait 5 seconds and the gauge will leave the setting mode and save automatically.

Color Setting

1. Select Boost Gauge by pressing **PG** on the remote control.
2. Then press **R/G/B** to enter the color selection mode. Press the **R/G/B** button again to cycle through the different color combinations (if applicable). Press **SET** or wait 5 seconds to leave this setting mode.

Brightness Adjust Setting

1. Select Boost Gauge by pressing **PG** on the remote control.
2. Then press **R/G/B** to enter the color selection mode. Press **▲** to increase the brightness or press **▼** to decrease. Press **SET** or wait 5 seconds to leave this setting mode.

Warning Value Setting

When shown value exceeds the set value, the WARNING (LED backlight will flash) will be activated.

1. Select Boost Gauge by pressing **PG** on the remote control.
2. Press **F/P** or **WN** to enter the warning setting mode. Press **▲** or **▼** to adjust the warning value. Press **SET** or wait 5 seconds to leave this setting mode.

Peak Value Recall

1. Select Boost Gauge by pressing **PG** on the remote control.
2. Press **▲** to display peak value recorded, or press **▼** to clear the peak value recorded. Press **SET** or wait 5 seconds to leave this setting mode.