


Remote Control Operation Manual - Oil/Air Pressure Gauge

This document will assist you in operating your remote control.
If you have any questions, please email support@podì.ca.






Tips for remote control operation:

1. Please have the remote control pointing to the gauge you are going to set up.
2. The gauge dial will flash when you press a button to acknowledge the command to enter a mode.
3. To save settings, press  or wait 5 seconds and the gauge will leave the setting mode and save automatically.

Color Setting







1. Select Oil/Air Pressure Gauge by pressing  on the remote control.
2. Then press  to enter the color selection mode. Press the  button again to cycle through the different color combinations (if applicable). Press  or wait 5 seconds to leave this setting mode.

Brightness Adjust Setting





1. Select Oil/Air Pressure Gauge by pressing  on the remote control.
2. Then press  to enter the color selection mode. Press  to increase the brightness or press  to decrease. Press  or wait 5 seconds to leave this setting mode.

Warning Value Setting

When shown value exceeds the set value, the WARNING (LED backlight will flash) will be activated.

1. Select Oil/Air Pressure Gauge by pressing  on the remote control.
2. Press  or  to enter the warning setting mode. Press  or  to adjust the warning value. Press  or wait 5 seconds to leave this setting mode.

Peak Value Recall

1. Select Oil/Air Pressure Gauge by pressing  on the remote control.
2. Press  to display peak value recorded, or press  to clear the peak value recorded. Press  or wait 5 seconds to leave this setting mode.