




Remote Control Operation Manual - Oil/Water Temperature Gauge

This document will assist you in operating your remote control.
If you have any questions, please email support@podì.ca.





Tips for remote control operation:

1. Please have the remote control pointing to the gauge you are going to set up.
2. The gauge dial will flash when you press a button to acknowledge the command to enter a mode.
3. To save settings, press **SET** or wait 5 seconds and the gauge will leave the setting mode and save automatically.

Color Setting






1. Select Oil/Water Temperature Gauge by pressing  on the remote control.
2. Then press  to enter the color selection mode. Press the  button again to cycle through the different color combinations (if applicable). Press **SET** or wait 5 seconds to leave this setting mode.

Brightness Adjust Setting




1. Select Oil/Water Temperature Gauge by pressing  on the remote control.
2. Then press  to enter the color selection mode. Press  to increase the brightness or press  to decrease. Press **SET** or wait 5 seconds to leave this setting mode.

Warning Value Setting

When shown value exceeds the set value, the WARNING (LED backlight will flash) will be activated.

1. Select Oil/Water Temperature Gauge by pressing  on the remote control.
2. Press  or  to enter the warning setting mode. Press  or  to adjust the warning value. Press **SET** or wait 5 seconds to leave this setting mode.

Peak Value Recall

1. Select Oil/Water Temperature Gauge by pressing  on the remote control.
2. Press  to display peak value recorded, or press  to clear the peak value recorded. Press **SET** or wait 5 seconds to leave this setting mode.